



# SafetyDave

*Fire safety, first aid & rear vision systems*

1 Edgecombe Court, Moorabbin, Vic, 3189

PO Box 633 Moorabbin, Vic, 3189

Free Call 1800 072 338

T 03 9555 7585

F 03 9555 3575

E [enquiries@safetydave.com.au](mailto:enquiries@safetydave.com.au)

W [www.safetydave.com.au](http://www.safetydave.com.au)

## HOW TO ADJUST A CAMERA FROM THE BACK WALL

1. Loosen the **2** phillips head screws on each side of the Camera and push up with thumbs (if this doesn't work refer to steps 2-6)
2. Unscrew the 3 screws holding the camera to the wall of the caravan.
3. Using a Pick, Stanley knife or sharp tool, break the silicone sealing the camera from the back of the caravan wall.
4. Pry the camera from the wall of the caravan with a wedge or plastic tool, and slowly work around the camera from 360 degrees.
5. After the camera is off the caravan wall, slowly pick away at the silicone holding the cable and free it up (**very** carefully, ensuring not to pinch, cut or damage the cable).
6. Adjust the camera into the position wanted and temporarily mount on the wall of the caravan. Have a look through your monitor to see if you are happy with the angle of the camera.
7. Finalise any adjustments, then seal the back of the camera with silicone such as Sikaflex. **Ensure to use a UV** stabilising sealant.

The task is now complete.