



# SafetyDave

Fire safety, first aid & rear vision systems

## Ford Ranger/Everest Camera Integration Guide

### Models:

MY24.5 and above ONLY (Mid 2024 and later)

### Compatible Cameras:

Standard definition single cameras only (Dual cameras cannot be supported at this stage).

AHD Cameras can be supported with the addition of a Safety Dave AHD Converter (SKU 670171)

*Note: audio is not supported*

### Location of Ford Loom:


Located under the dash on the passenger side, near the fuse box.

The loom contains 4 wires: Positive, Negative, Video Positive, Video Negative.

### Wiring Required:

#### Special Safety Dave Ranger/Everest Splice Cable

Safety Dave now has available a Splice Cable with a 4-Pin Male connection designed specifically to connect the Ford Ranger/Everest loom. Each wire in the splice is marked to allow for easy connectivity with the Ford Ranger/Everest loom.

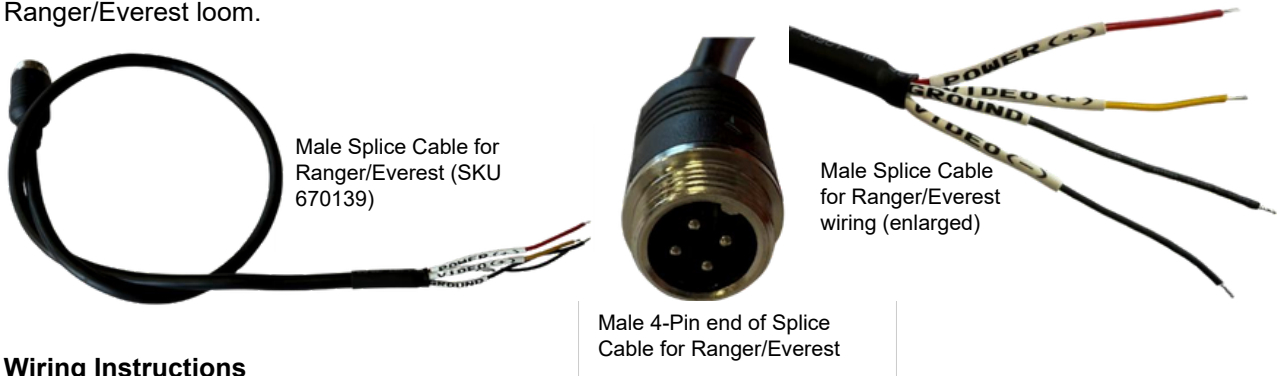

### Wiring Instructions

#### **Ford Range/Everest**

Blue & Orange (video negative)

Grey & Brown (video positive)

Yellow & Grey (positive)

Black & Yellow (ground/negative)

#### **Safety Dave Splice**

Black (video negative)

Yellow (video positive)

Red (positive) Black

(ground)

### 7.5m Cable

A 7.5m 4-Pin cable is then run to the back of the vehicle to allow for connectivity to the caravan/trailer.

The Safety Dave Woza Kit is compatible and can be added to provide an enhanced connection between caravan and towing vehicle.

### **Safety Dave Kits:**

SKU 674001 Ford Ranger/Everest Integration Kit (Standard Definition Cameras)

SKU 674002 Ford Ranger/Everest Integration Kit w/AHD Converter (AHD Cameras)

*Note: if you do not have the Safety Dave Ranger/Everest Splice Cable you can create your own splice cable from any Safety Dave 4 Pin Cable. Once spliced cut the white audio cable and the white cord on the Safety Dave wire and use the copper around the video wire as the video negative wire.*